

SPECTRE®

Performance

Intake Installation Instructions

P/N 9944 (red filter) - P/N 9944B (blue filter)

P/N 9944K (black filter) - P/N 9944W (white filter)

Year/Make/Model/Engine

2007-2011 Jeep Wrangler JK 3.8L V6

NOT LEGAL FOR SALE OR USE ON ANY POLLUTION CONTROLLED MOTOR VEHICLE IN CALIFORNIA OR STATES ADOPTING CALIFORNIA EMISSION PROCEDURES.

See Spectreperformance.com for CARB status on each part for a specific vehicle



Parts List

- 1- Intake tube
- 1- 889610 Filter
- 1- Heat shield
- 1- 3" coupler
- 3- Hose clamp
- 1- Coupler sleeve
- 1- 3" grommet
- 1- 1/2" grommet
- 1- 17" rubber seal

Tools Required:

- Flat blade screwdriver
- Ratchet
- 10mm socket
- Extension
- 5/16" or 8mm nut driver

For filter reorders ask at the special order counter of your local parts store or call:

1-909-673-9800

ask for: P/N HPR9610 (red filter)

P/N HPR9610B (blue filter)

P/N HPR9610K (black filter)


P/N HPR9610W (white filter)



Step 1
Safety first! Before you begin the installation, make sure that the vehicle is in park with the parking brake set. Disconnect the negative battery terminal and verify all components listed are present.



Step 2
Disconnect the air temperature sensor by releasing the locking tab and disconnect.

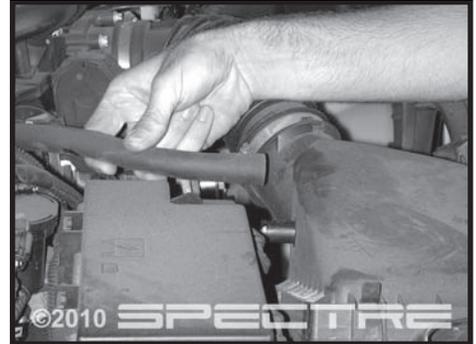


Step 3
Disconnect the crank case vent hose from the stock intake.



Step 4
Loosen the hose clamp that secures the stock intake tube to the throttle body, then remove the intake tube from the throttle body.



Step 5
Lift up the air box assembly to remove entire unit which is held in place by grommets.

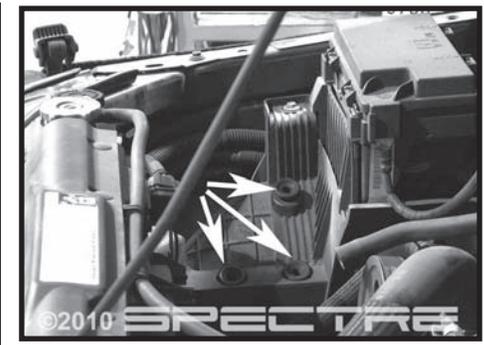

Step 6
Remove the 3 grommets from the factory air box cradle.




Step 7
Remove the air temperature sensor from the stock intake tube. Use care in removing this as it is fragile and will need to be re installed into the new intake.




Step 8
Install the supplied grommet into the hole located on the new Spectre intake tube. Reinstall the air temperature sensor into the grommet hole.



Step 9
Install the coupler sleeve onto the throttle body.

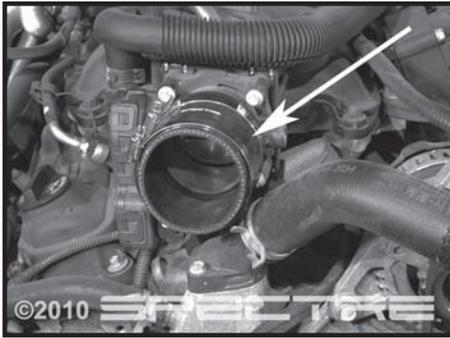

Step 10
Install the coupler over the coupler sleeve on throttle body and fasten securely with the supplied hose clamp. Install a second clamp but do not tighten at this time.

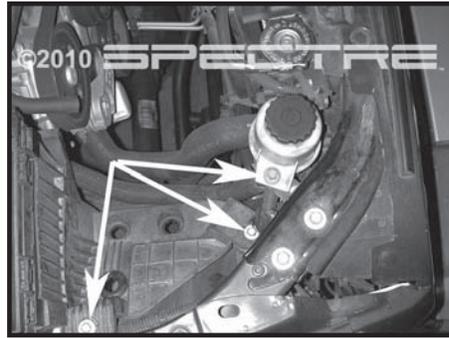

Step 11
Remove the three 10mm screws as shown.




Step 12
Dress the heatshield with the 3" grommet and the rubber seal.




Step 13
Install the heat shield as shown using the hardware that was removed in step 11.



Step 14
Install the air intake tube by passing the filter end through the housing. Align the throttle body end of the tube with the coupler. Once the tube is aligned, fasten securely with supplied hose clamp. (Silicone based lubricants help locate the tube in the grommet.)

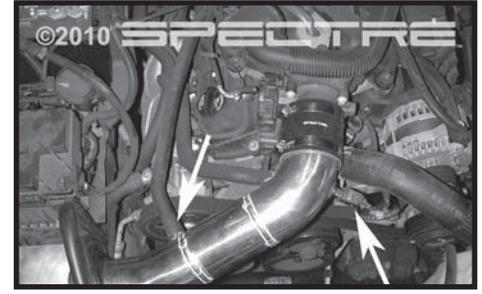

Step 15
Connect the crank case vent hose to the intake tube fitting. Reconnect the wiring harness for the air temperature sensor.

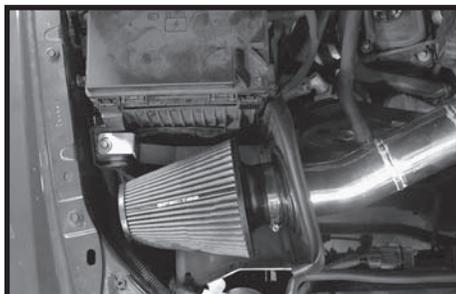

Step 16
Install the Spectre air filter and fasten securely with the supplied hose clamp. Ensure that all clamps and hardware are fully tightened at this time.



Step 17
Start the vehicle and let it warm up. Shut off and inspect the installation once more for any loose clamps or wires. Test drive & enjoy!

If you have any difficulties or questions regarding the installation of this intake system, contact the Spectre Performance Technical Department by email - Tech@spectreperformance.com or by phone 1-909-673-9800 Monday thru Friday 6:00am to 2:00pm PST.

NOT LEGAL FOR SALE OR USE ON ANY POLLUTION
CONTROLLED MOTOR VEHICLE IN CALIFORNIA OR
STATES ADOPTING CALIFORNIA EMISSION PROCEDURES.

See Spectreperformance.com for CARB status on each part for a specific vehicle

SPECTRE[®]
Performance

(909) 673-9800

www.spectreperformance.com

© 2015 SPECTRE PERFORMANCE Made in China

176174A
10/12/15