

SPECTRE®

Performance

Intake Installation Instructions

P/N 9019 (red filter) - P/N 9019B (blue filter)

P/N 9019K (black filter)

Year/Make/Model/Engine

2011-2014 Ford Edge 3.5L 3.7L V6

NOT LEGAL FOR SALE OR USE ON ANY POLLUTION CONTROLLED MOTOR VEHICLE IN CALIFORNIA OR STATES ADOPTING CALIFORNIA EMISSION PROCEDURES.

See Spectreperformance.com for CARB status on each part for a specific vehicle



Parts List

- 1- Intake tube
- 1- Heat shield, Large
- 1- Heat Shield, Small
- 1- Air filter
- 1- 3 1/2" Flex coupler
- 1- 3 1/2" 90° Coupler
- 1- MAFS calibration sleeve
- 1- Edge trim
- 1- Edge trim, 1/16"
- 1- Fitting
- 1- 1/2" Hose
- 1- 3/8" Hose
- 2- 3/8" Hose clamps
- 2- 1/2" Hose clamps
- 5- 3 1/2" Hose clamps
- 1- Throttle body adaptor ring
- 1- MAF Extension harness
- 2- M4 Machine screws
- 4- Locknuts
- 4- Washers
- 4- Allen bolts
- 1- Allen wrench

Tools Required:

- 5/16" or 8mm Nut driver
- 1/4" Nut driver
- T20 Torx
- Phillips screwdriver


For filter reorders ask at the special order counter of your local parts store or call:
1-909-673-9800

ask for: P/N HPR9885 (red filter)
P/N HPR9885B (blue filter)
P/N HPR9885K (black filter)




Step 1

Safety first! Before you begin the installation, make sure that the vehicle is in park (or neutral for a manual transmission) with the parking brake set. Disconnect the negative battery terminal and verify that all components that are listed are present. Note: This kit was designed and tested on a stock engine without any custom tuning done to the engine computer. Removing the battery cable may erase the programmed radio stations. The anti-theft code will need to be entered into some radios after the battery cable is connected. The anti-theft code can typically be found in the owner's manual or at your local dealership.

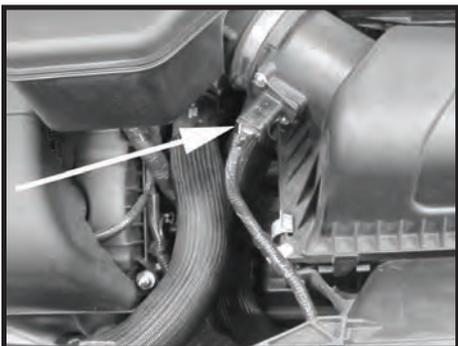


Step 2

Slide the red clip back then disconnect the electrical connector at the Mass Air Flow Sensor (MAFS).

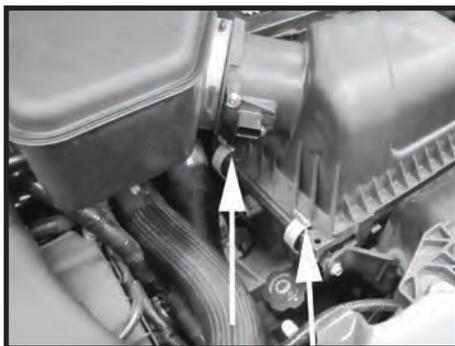


Step 3

Unclip the two hold down clips on the air box lid.

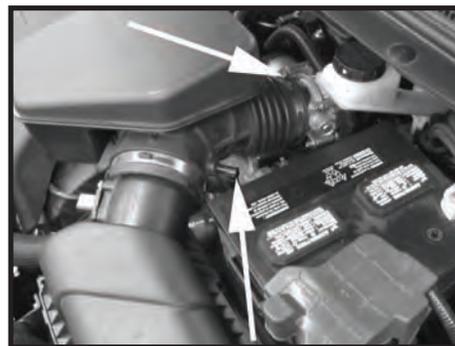


Step 4

Loosen the clamp at the throttle body and remove the factory vent line from the intake tube.

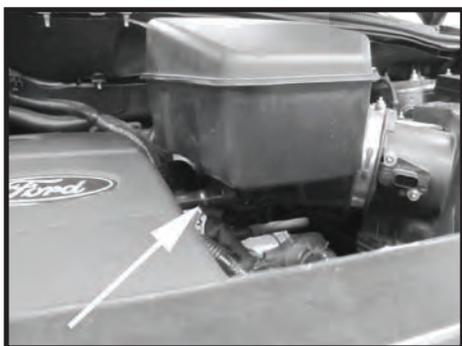


Step 5

Disconnect the crank case vent line from the plenum. The fitting has a tab on it. Push the tab up while at the same time pulling the tube off the plenum.

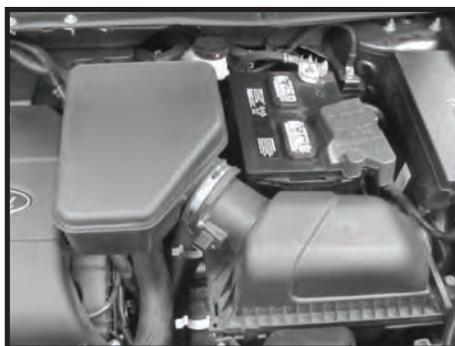


Step 6

Remove the factory intake tube, air box lid assembly, and air filter from the vehicle.

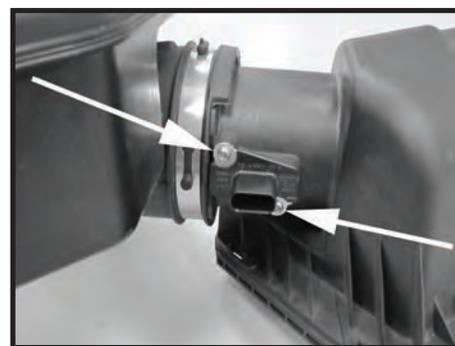


Step 7

Remove the MAFS from the factory air box.

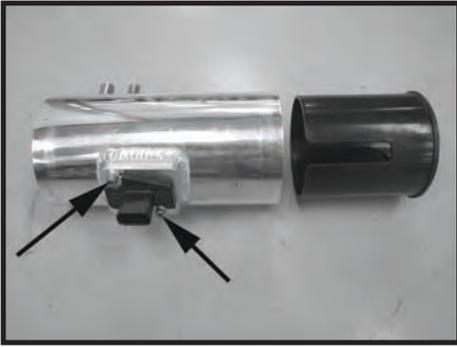


Step 8
Install the MAFS into the Spectre Performance aluminum intake tube, then install the MAFS Sleeve into the aluminum intake tube.

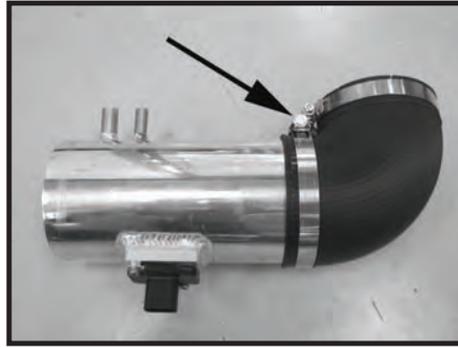


Step 9
Install the 90° coupler on the end of the tube. Install a second clamp but do not tighten at this time.




Step 10
Assemble the heat shield with the tabs placed inside of the large heat shield. Install the edge trim on the upper and lower edge.

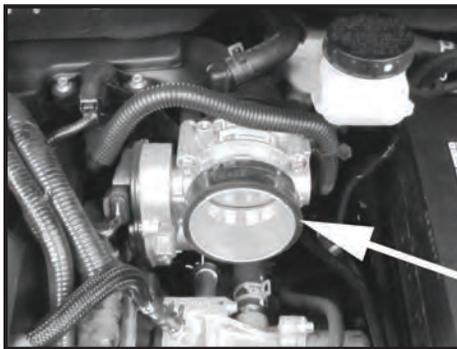


Step 11
Install the throttle body adapter ring onto the throttle body.

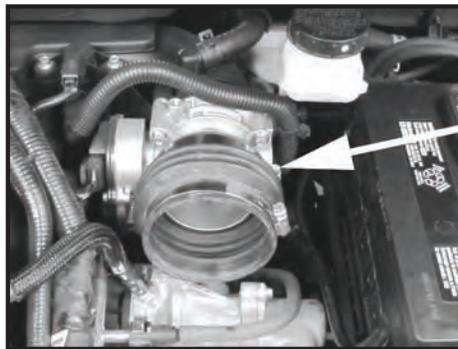


Step 12
Install the flex coupler on the throttle body and secure the boot in place. Install a second clamp but do not tighten at this time.

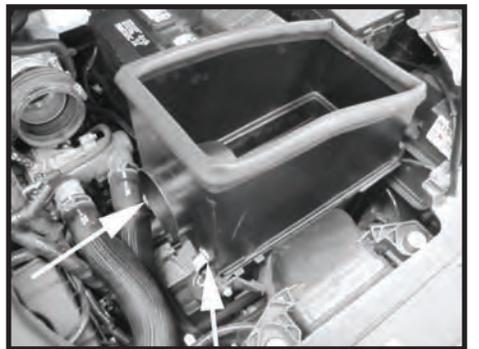


Step 13
Install the heat shield making sure that the tabs on the heat shield are inserted into the lower factory air box slots. With the heat shield located into the slots, using the 2 factory clips from the air box, clip the heat shield into position.

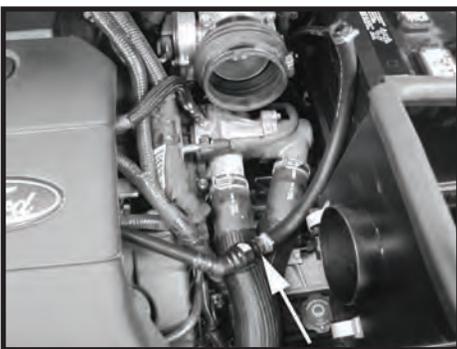


Step 14
Install the fitting supplied in the kit to the breather tube. Install the hose and secure it with the provided clamp. Install a second clamp but do not tighten at this time.

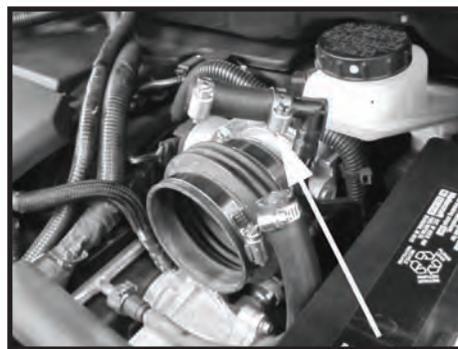


Step 15
Install the hose and secure it with the provided clamp. Install a second clamp but do not tighten at this time.

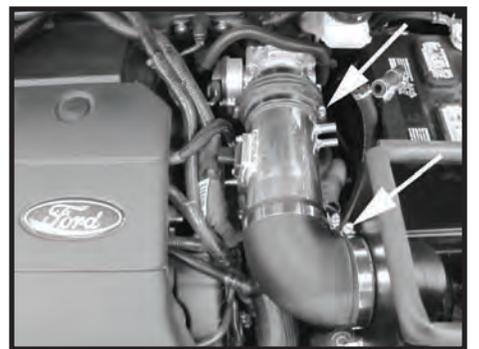


Step 16
Install the intake tube assembly into the flex coupler first then place the angled coupler onto the heat shield tube. Once in the desired location fasten it securely in place.

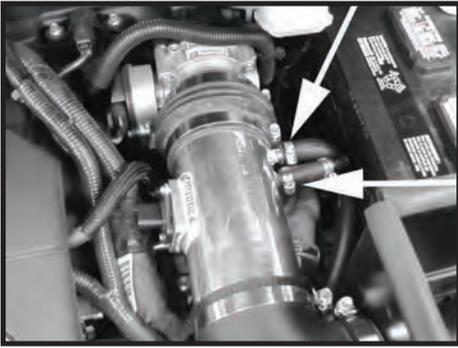

Step 17
Connect the two vent lines to the intake tube and fasten the clamps securely in place.

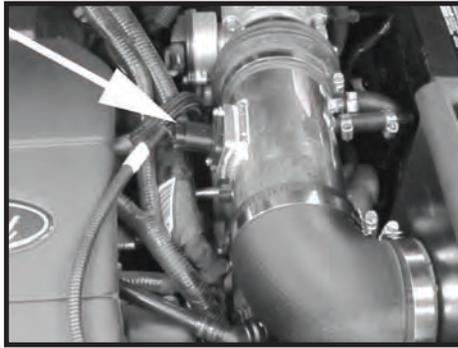

Step 18
Connect the MAF extension harness into the factory wiring harness and the MAF on the intake tube.

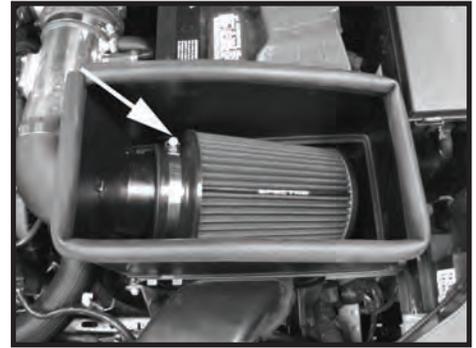

Step 19
Install the supplied air filter and clamp and tighten the clamp that secures the air filter.



Step 20
Make sure that all clamps and hardware are fully tightened. Reconnect the battery cable and start the engine and let it warm up. Shut it off and inspect the installation once more for any loose clamps, wires, or hardware. Test drive & enjoy! Your installation is now complete. Periodically check all clamps and brackets.

If you have any difficulties or questions regarding the installation of this intake system, contact the Spectre Performance Technical Department by email - Tech@spectreperformance.com or by phone 1-909-673-9800 Monday thru Friday 6:00am to 2:00pm PST.

NOT LEGAL FOR SALE OR USE ON ANY POLLUTION CONTROLLED MOTOR VEHICLE IN CALIFORNIA OR STATES ADOPTING CALIFORNIA EMISSION PROCEDURES.

See Spectreperformance.com for CARB status on each part for a specific vehicle

SPECTRE
Performance

(909) 673-9800

www.spectreperformance.com

© 2015 SPECTRE PERFORMANCE Made in China